


**ACHTERZIJDE – IM400 , 100 en IM60 --Connector**

**Mobilofoon aansluiting**

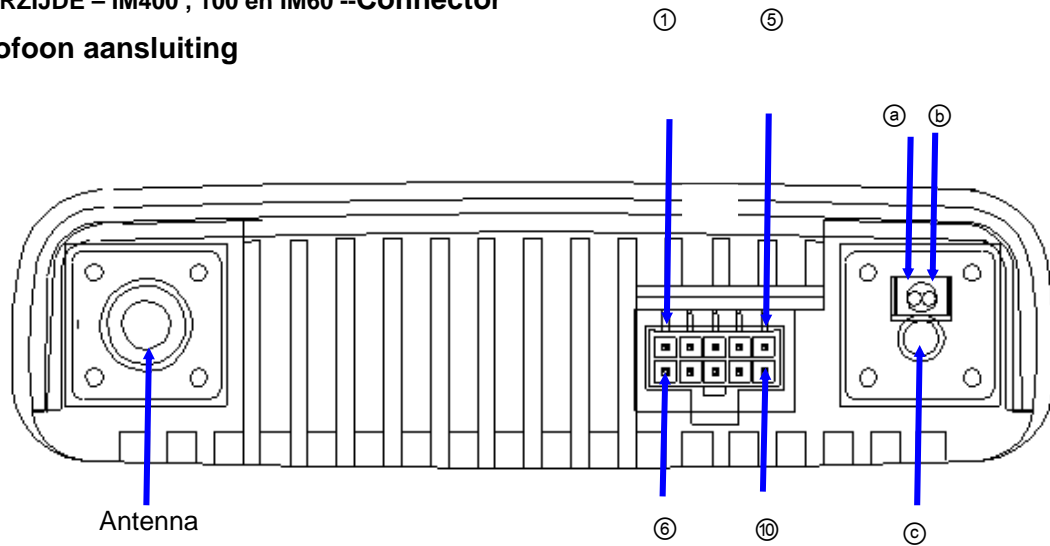

10PIN CONNECTOR DESCRIPTION			
Connection	Pin NO	Function	Remark
GND	①	Ground	GND
CPU_INT_PTT	②	Push To Talk	GND Enable
5V	③	Internal 5 Volt Regulator	5 Volt
FLAT_AUDIO_IN/OUT	④	Constant Audio Signal Level	
S/W_BATT	⑤	Switched Battery	13.6V Enable
CPU_RSSI_DET	⑥	Received Signal Strength Indication	
CPU_RX_PATH	⑦	Busy Rx	5V Enable (Rx Signal Open)
MIC	⑧	MIC Input	
CPU_SP_MUTE	⑨	Speaker ON/OFF	0V Enable (Speaker Close)
CPU_TX_PATH	⑩	MIC MUTE	0V Enable (MIC Input Close)

Power Supply & External Speaker Jack			
Connection	Pin NO	Function	Remark
13.6V	a	Power Cable	13.6V
GND	b	Ground	
Speaker OUT	c	External Speaker Jack	8 ohm (recommended)

